
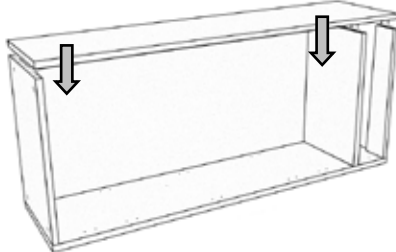
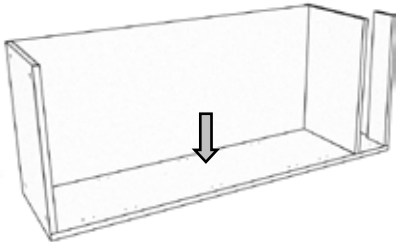
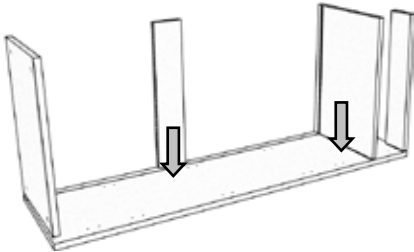


# GLASS DRESSER UNIT


**NOTE:** The medium wall dresser unit assembly is shown. The high wall dresser has three hinges.

1. Insert fittings into End Panel as shown. Repeat for opposite End Panel.
2. Insert the circular cams B into the top panel, ensuring the arrows point towards the pre drilled edge. Push the panel firmly home onto the End Panel. Using a screwdriver, turn the cams clockwise to lock.
3. Slide the back panel firmly home, into the grooves on the top, bottom and end panels.
4. Place the remaining end panel over the other panels and push firmly home, ensuring that the back panel locates into the groove. Lock the cams as before.

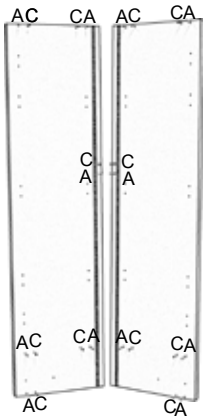


Repeat to fit the bottom panel, and two side rails. All cams should be facing outwards.

5. Fit the tandem drawer runners to the cabinet underneath the bottom panel. Secure using two M screws, as shown.

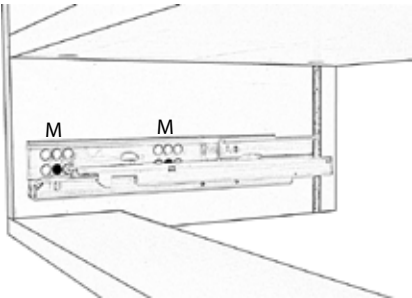

6. Fit the hinge, ensuring that the arrows on the hinge plate point to the front of the unit.

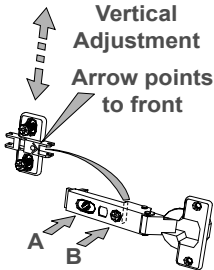

7. See overleaf to assemble the tandem drawer box.
8. Fit the loose glass shelves and downlight as required.



| FITTINGS SUPPLIED |                                                                                    |                            |    |   |                                                                                     |                     |         |
|-------------------|------------------------------------------------------------------------------------|----------------------------|----|---|-------------------------------------------------------------------------------------|---------------------|---------|
| A                 |  | Metal Dowel                | 12 | M |  | Euro Screw 6 x 11mm | 4       |
| B                 |  | Metal Cam                  | 12 | P |  | Shelf Stud          | 12      |
| C                 |  | Wooden Dowel 8 x 40mm      | 12 | S |  | Door Buffer Pad     | 2 pairs |
| J                 |  | Countersunk Screw 6 x 1/2" | 8  | T |  | 5mm Bungs           | 26      |
| K                 |  | Flange Head Screw 6 x 3/4" | 4  | V |  | Crown Conceal Caps  | 2       |


To align doors, loosen screw A first. Use screw B to level doors then re-tighten screw A.

**NOTE:** The Dresser Unit stands on the worktop - this is at the correct height assuming you are using a 40mm worktop.




# GLASS DRESSER UNIT - ASSEMBLE TANDEM BOX DRAWER


1. Slide the base panel into the groove on the metal side, and fix using two K screws as shown below.

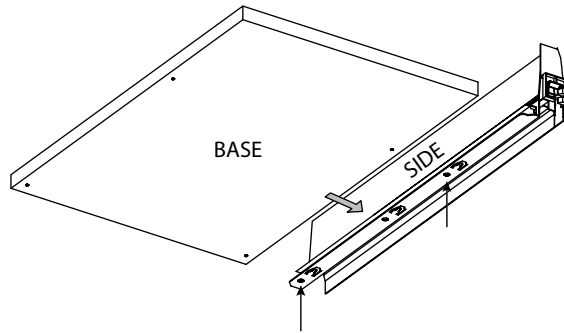


2. Push the plastic lug into the side until it locks. Repeat for the remaining plastic lug. Secure the back panel using four J screws.

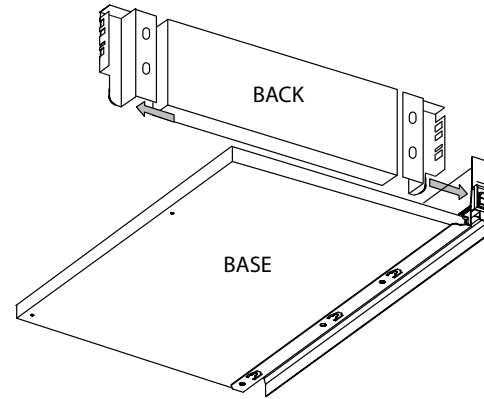

3. Slide opposite side onto base panel and fix as shown.

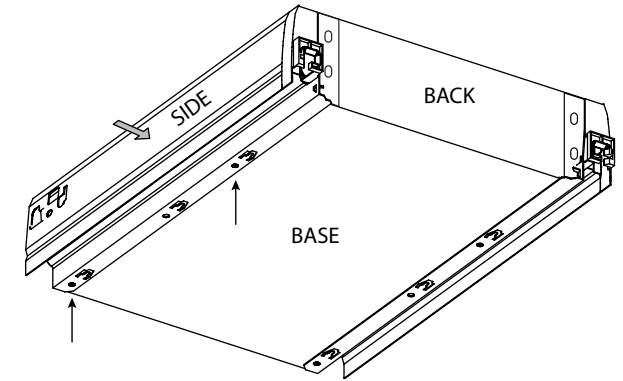

4. It may be necessary to drill additional holes on the fascia panel to take the Drawer Front fixing clips. The necessary dimensions are shown below.

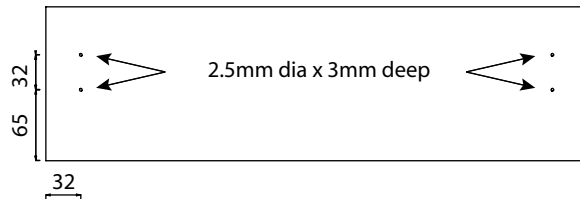

5. To adjust the drawer front once it has been fitted to the drawer box, use the adjustment screws as shown below.

