

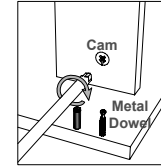
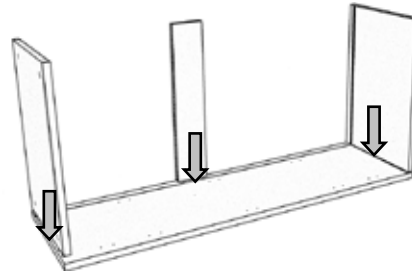


# LIFESTYLE WORKTOP DISPLAY UNIT


1. Insert fittings into End Panel as shown. Mirror for the other End Panel.
2. Insert the circular cams B into the holes in the bottom panel, ensuring that the arrows point towards the drilled edge. Push the panel firmly home onto the end panel. Using a screwdriver, turn the cam clockwise to lock. Repeat for the top panel and back support.

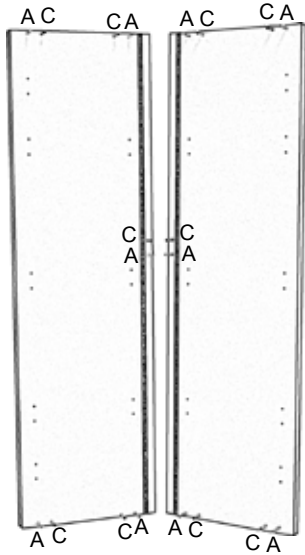

3. Slide the back panel into the grooves in the top and bottom panels, and push home into the end panel.

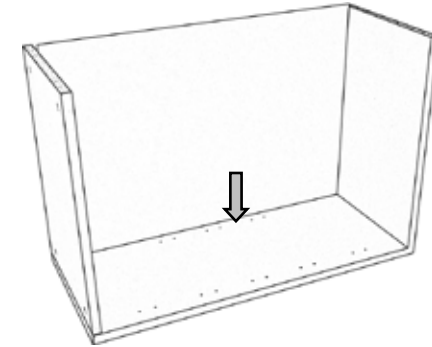

4. Place the remaining end panel over the other panels and push firmly home, ensuring that the back panel locates into the groove. Lock the cams in the top and bottom panels, and back support as before.

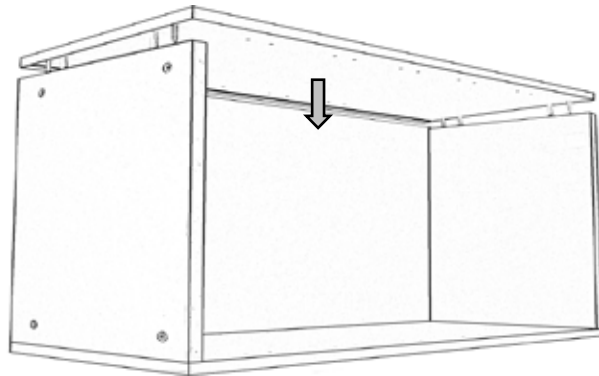

5. Locate the shelves onto the shelf studs and fit the downlight if required.



## FITTINGS SUPPLIED

|          |  |                          |                |          |  |                               |           |
|----------|--|--------------------------|----------------|----------|--|-------------------------------|-----------|
| <b>A</b> |  | Metal Dowel              | <b>10</b>      | <b>J</b> |  | Countersunk Screw<br>6 x 1/2" | <b>8</b>  |
| <b>B</b> |  | Metal Cam                | <b>10</b>      | <b>N</b> |  | Round Head Screw<br>6 x 5/8"  | <b>4</b>  |
| <b>C</b> |  | Wooden Dowel<br>8 x 40mm | <b>12</b>      | <b>P</b> |  | Shelf Stud                    | <b>12</b> |
| <b>E</b> |  | Connecting Screws (M/F)  | <b>3 pairs</b> | <b>T</b> |  | 5mm Bungs                     | <b>26</b> |