



WALL CHISEL END UNIT

PLEASE NOTE: The following instructions show a medium wall chisel end. The same applies to assemble a high wall chisel end, except there is only one option for the shelves.


1. Secure the side (longer) panel to the back (shorter) panel using three F screws as shown.

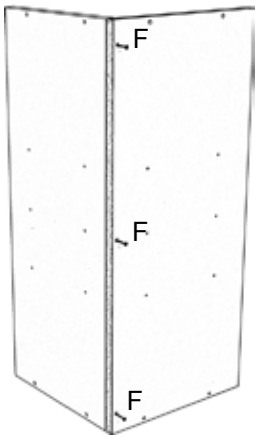

2. Drill through the pre-drilled holes at the top and bottom of the side panel. Repeat for the back panel.

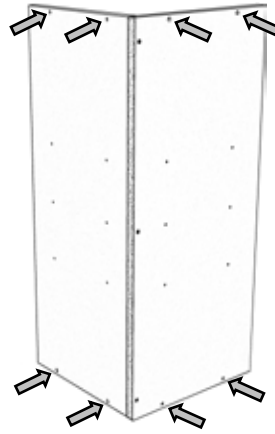


3. Secure the bottom panel to the side panel using two F screws.

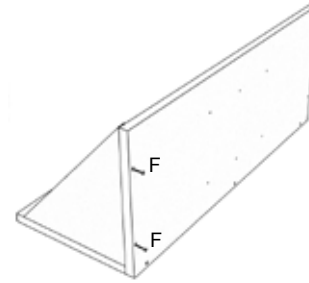


Repeat for the top panel.


4. Repeat to secure the top and bottom panels to the back panel.

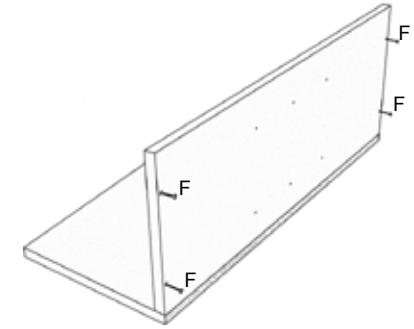

5. Place the backplate and hinge plate together as shown aligning the pre-drilled holes.

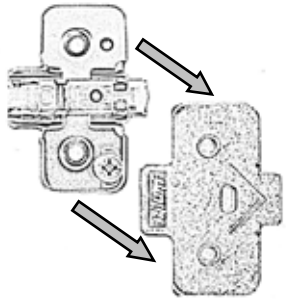

Fit the hinge plate into the pre-marked holes on the back panel, ensuring the arrow on the hinge is facing the front of the cabinet and secure using two H screws. Repeat for the remaining hinge plate.

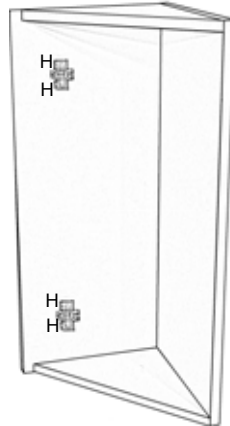

6. With the medium wall chisel end there are two options for fixing the shelves:


Medium Wall:

Option A. One Shelf



Drill through the side and back panel at position A shown. Secure using four F screws.

Option B. Two Shelves

Drill through the side and back panel at position B shown. Repeat for the second shelf. Secure using four F screws for each shelf.

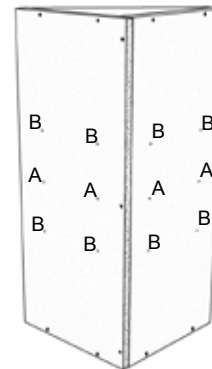

7. The -45° angled hinge mechanism to attach the door to the cabinet

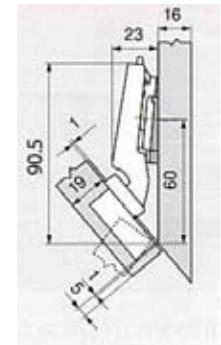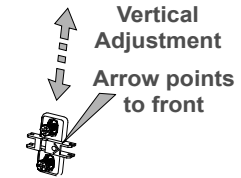

FITTINGS SUPPLIED

E		Connecting Screws (M/F)	3 pairs
F		Black Chipboard Screw 8 x 45mm	20
H		Countersunk Screw 6 x 5/8"	4
J		Countersunk Screw 6 x 1/2"	4
S		Door Buffer Pad	2 pairs

High Wall:

Option B Only. Two Shelves

Drill through the side and back panel at position B shown. Repeat for the second shelf. Secure using four F screws for each shelf.