
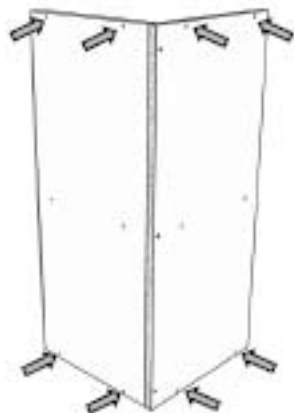


WALL END DISPLAY



PLEASE NOTE: The following instructions show a medium wall end display. The same applies to assemble a high wall end display, except the positioning of the shelves.

1. Secure the side (longer) panel to the back (shorter) panel using three F screws as shown.
2. Drill through the pre-drilled holes at the top and bottom of the side panel. Repeat for the back panel.

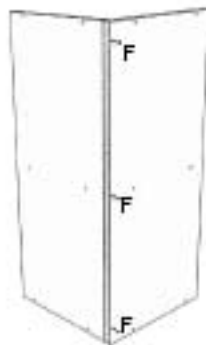

3. Secure the bottom panel to the side panel using two F screws.

4. Repeat to secure the top and bottom panels to the back panel.

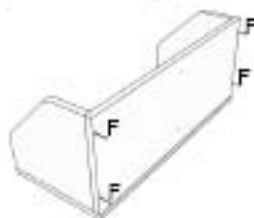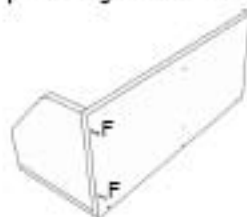

Repeat for the top panel.


5. There are different shelving options dependant on the size of the wall end display:



Medium Wall:

Option A. One Shelf
Secure using four F screws.

High Wall:

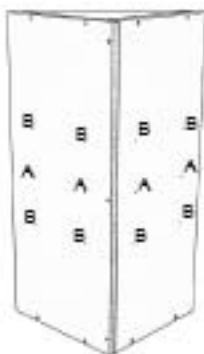Option B. Two Shelves
Secure using four F screws for each shelf.



FITTINGS SUPPLIED			Medium Wall	High Wall
E		Crescent Screws (60%)	3 pairs	3 pairs
F		Black Phillips Screws 6 x 40mm	15	20

