



BASE END DISPLAY

PLEASE NOTE: The diagrams depict a Right Hand Base End Display.


1. Secure the side (longer) panel to the back (shorter) panel using three F screws as shown.

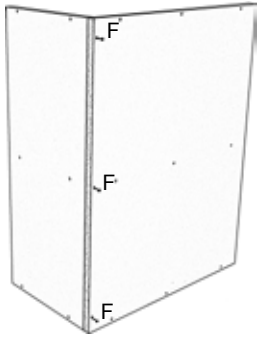


2. Drill through the pre-drilled holes at the bottom of the side panel. Repeat for the back panel.

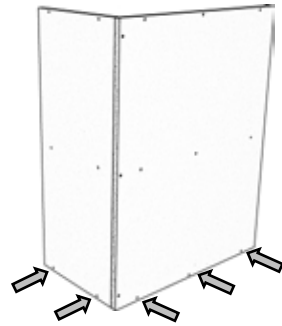


3. Secure the bottom panel to the back panel using two F screws.

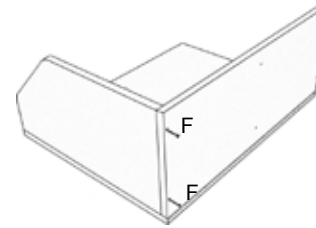

4. Repeat to secure the bottom panel to the side panel using 3 F screws.

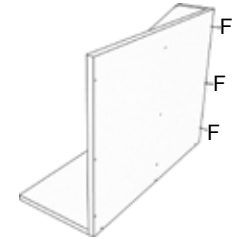


5. Secure the shelf to the side panel using three F screws as shown. Repeat to secure shelf to the back panel.

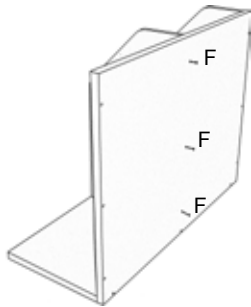

6. If you want to use the feet, the feet blocks require modification.


Cut this off

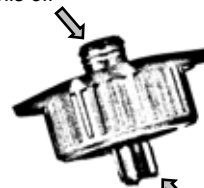





Pull this out

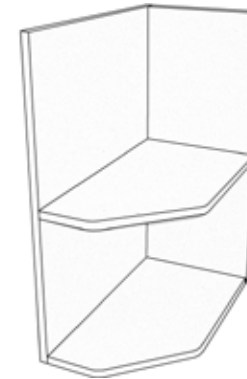Secure to the bottom panel using two H screws per block.

7. The Base End Display does not come with a top panel, this shows a complete end display.



FITTINGS SUPPLIED

E		Connecting Screws (M/F)	3 pairs
F		Black Chipboard Screw 8 x 45mm	15
H		Countersunk Screw 6 x 5/8"	8
Z		Plinth Clip	2